


Rekola Reflex swiveled squeegee

For instructions also look at
<https://youtu.be/GByqBw6lGeU>

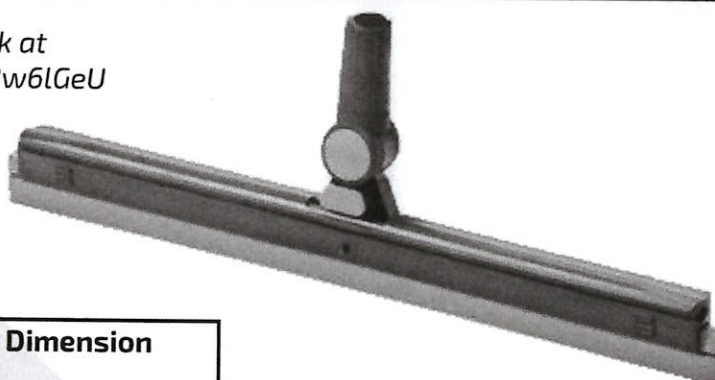

Product code	Color	Dimension		
16-0010/2	Grey	50 x 5 x 3 cm	Rekola Reflex squeegee with TPR blade	480 grs
Packed	1 pcs pp bag		40 pcs 1-pack per transport box	
Where:	All smooth and sealed hard top floorings for hygienic cleaning results: e.g. healthcare, nursery, school, university, office, public building, food industry, hospitality, residential, pharmaceutical and cleanroom areas.			
How:	<p>In conjunction with Rekola Reflex UMF, MF/UMF, Abrasive Soft, AquaPlus cloths, special designed and Swan labeled* for this purpose. <small>*(accept AquaPlus)</small></p> <p>Rekola Reflex squeegee is preferred operating in S-curve modus. Put squeegee on top of cloth and leave unused cloth surface behind the squeegee. Move forward, while leaving the unused space of cloth following the squeegee. Dirt will be collected in front of squeegee and rest of cloth will stay clean. When cleaning edge is filled with dirt; lift squeegee by a few centimeters and put it a. 1-2 cm backwards on cloth, to a new edge. Repeat this handling as much as necessary. Once one side used, lift the squeegee and turn 180 degrees. Put squeegee on top of the cloth's backside. Repeat as much as necessary by repositioning squeegee by a. 1-2 cm towards end of the cloth.</p>			
Mount:	Right handers*: Hold squeegee by swivel in left hand, push locker backwards open by thumb and keep lid controlled by left hand thumb. Take a pre-prepared cloth by a corner between right hand thumb and pointing finger. Hold lid with left hand thumb open and insert about 5 cm between lid and frame. Close lid with left hand thumb and keep it fixed with light pressure. Pull the cloth between right hand thumb and pointing finger up, until cloth is a. 3 cm outside the squeegee. Close the locker with left hand pointing and middle finger, while keeping the left hand on the lid during the mounting of the cloth. Ready for use!			
Demount:	<p>Right handers*: Hold squeegee fixed by left hand, pointing with one end into Addon EVA mop bag. Release locker with left hand thumb and let cloth drop from the squeegee into mop bag.</p> <p>No touch of dirty cloths</p> <p>Even dirty cloth does not to be touched we advise using gloves during cleaning operations according good cleaning practice.</p> <p><small>*Lefties switch right for left</small></p>			

REKOLA

Maintenance	
Ergonomics:	The unique combination of sharp edged TPR blade combined with high-tech textile fibers, allow cleaning without putting any force to tool during cleaning.
Cleaning:	We recommend cleaning the tool after usage being stored for next use. If using Washing-Disinfector (Deko), ensure TPR blade is facing upwards and not resting on metal grill.
Disposable:	Rekola Reflex squeegee is made of pure synthetics: may be used for recycling programs; or because of their high energy value and with no other than CO ₂ and water as emission, safely disposed by controlled energy-supply programs.
Components	
frame	
16-0010	frame and lid made out of ABS; swivel, swivel gearing and locker PA; locker spring PP
16-00102	PP structure and TPR body, PA pin. Also available as replacement set
Characteristics	
Multiple functions	Without cloth also as broom for collecting slush and larger particles; and used for squeegeeing surfaces before or afterwards
Multiple surfaces	Floors, walls, ceilings Also in conjunction with 13-0110013 swivel locker
Color coded areas	For color coded areas a set of colored collars art. 13-0110012 is available
Guarantee	
One year manufacturer guarantee after purchase	